



iVMS-4200 Lite

Legal Information

User Manual

©2018 Hangzhou Hikvision Digital Technology Co., Ltd.

About this Manual

This Manual is subject to domestic and international copyright protection. Hangzhou Hikvision Digital Technology Co., Ltd. ("Hikvision") reserves all rights to this manual. This manual cannot be reproduced, changed, translated, or distributed, partially or wholly, by any means, without the prior written permission of Hikvision.

Please use this user manual under the guidance of professionals.

Trademarks

HIKVISION and other Hikvision marks are the property of Hikvision and are registered trademarks or the subject of applications for the same by Hikvision and/or its affiliates. Other trademarks mentioned in this manual are the properties of their respective owners. No right of license is given to use such trademarks without express permission.

Disclaimer

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, HIKVISION MAKES NO WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, REGARDING THIS MANUAL. HIKVISION DOES NOT WARRANT, GUARANTEE, OR MAKE ANY REPRESENTATIONS REGARDING THE USE OF THE MANUAL, OR THE CORRECTNESS, ACCURACY, OR RELIABILITY OF INFORMATION CONTAINED HEREIN. YOUR USE OF THIS MANUAL AND ANY RELIANCE ON THIS MANUAL SHALL BE WHOLLY AT YOUR OWN RISK AND RESPONSIBILITY.




REGARDING TO THE PRODUCT WITH INTERNET ACCESS, THE USE OF PRODUCT SHALL BE WHOLLY AT YOUR OWN RISKS. HIKVISION SHALL NOT TAKE ANY RESPONSIBILITIES FOR ABNORMAL OPERATION, PRIVACY LEAKAGE OR OTHER DAMAGES RESULTING FROM CYBER ATTACK, HACKER ATTACK, VIRUS INSPECTION, OR OTHER INTERNET SECURITY RISKS; HOWEVER, HIKVISION WILL PROVIDE TIMELY TECHNICAL SUPPORT IF REQUIRED.

SURVEILLANCE LAWS VARY BY JURISDICTION. PLEASE CHECK ALL RELEVANT LAWS IN YOUR JURISDICTION BEFORE USING THIS PRODUCT IN ORDER TO ENSURE THAT YOUR USE CONFORMS THE APPLICABLE LAW. HIKVISION SHALL NOT BE LIABLE IN THE EVENT THAT THIS PRODUCT IS USED WITH ILLEGITIMATE PURPOSES.

IN THE EVENT OF ANY CONFLICTS BETWEEN THIS MANUAL AND THE APPLICABLE LAW, THE LATER PREVAILS.

Symbol Conventions

The symbols that may be found in this document are defined as follows.

Symbol	Description
 Danger	Indicates a hazardous situation which, if not avoided, will or could result in death or serious injury.
 Caution	Indicates a potentially hazardous situation which, if not avoided, could result in equipment damage, data loss, performance degradation, or unexpected results.
 Note	Provides additional information to emphasize or supplement important points of the main text.

Contents

Chapter 1 Create Password and Login	1
Chapter 2 Resource Management	2
2.1 Add Device	2
2.1.1 Activate Devices	2
2.1.2 Add Online Device	3
2.1.3 Add Device by IP Address or Domain Name	7
2.1.4 Add Device by Cloud P2P	8
2.1.5 Import Devices in a Batch	10
2.2 Edit Device's Network Information	11
2.3 Restore/Reset Device Password	12
2.3.1 Reset Device Password	12
2.3.2 Restore Device's Default Password	13
2.4 Upgrade Device Firmware Version	14
2.5 Control Alarm Output	15
2.6 Broadcast to Connected Devices	15
Chapter 3 Cloud P2P	16
3.1 Register a Cloud P2P Account	16
3.2 Log in to Cloud P2P Account	17
Chapter 4 Live View	18
4.1 Start and Stop Live View	18
4.1.1 Start Live View for One Camera	18
4.1.2 Start Live View in Default View Mode	19
4.1.3 Add Custom View	20
4.1.4 Start Live View in Custom View Mode	20
4.1.5 Stop Live View	21
4.2 Auto-Switch in Live View	21

4.2.1 Auto-Switch All Cameras in Default View	22
4.2.2 Auto-Switch Custom Views	22
4.2.3 Auto-Switch Cameras of a Device	22
4.3 PTZ Control	23
4.3.1 Configure Preset	23
4.3.2 Configure Patrol	24
4.3.3 Configure Pattern	24
4.4 Manually Record and Capture	25
4.4.1 Manually Record Video	25
4.4.2 View Local Videos	26
4.4.3 Capture Pictures	26
4.4.4 View Captured Pictures	27
4.5 Instant Playback	27
4.6 Customize Window Division	28
4.7 More Functions	29
Chapter 5 Remote Playback	31
5.1 Asynchronous Playback	31
5.1.1 Search Video Files	32
5.1.2 Play Video Files	33
5.2 Synchronous Playback	33
Chapter 6 Download Video Files	34
6.1 Download for One Camera	34
6.2 Download for Multiple Cameras	34
Chapter 7 System Configuration	36
7.1 Set General Parameters	36
7.2 Set Live View and Playback Parameters	37
7.3 Set File Saving Path	38
7.4 Set Icons Shown on Toolbar	38

Chapter 1 Create Password and Login

For the first time use, the client will ask you to create a password for login. Then you can use the password for logging into the client software.

Note

- The software will judge password strength automatically. For your privacy, we strongly recommend changing the password to something of your own choosing (using a minimum of 8 characters, including upper case letters, lower case letters, numbers, and special characters) in order to increase the security of your product. And we recommend you reset your password regularly, especially in the high security system, resetting the password monthly or weekly can better protect your product.
 - Proper configuration of all passwords and other security settings is the responsibility of the installer and/or end-user.
-

Chapter 2 Resource Management

You can manage devices on the client, including adding, editing, and deleting the devices. You can also perform operations such as restoring device password and upgrading the device firmware version.

2.1 Add Device

After running the client, devices including network cameras, video encoders, DVRs, NVRs, etc., should be added to the client for the remote configuration and management, such as live view, playback, etc.

2.1.1 Activate Devices

For some devices, you are required to create the password to activate them before they can be added to the software and work properly.

Perform this task if to activate device.

Steps



Note

This function should be supported by the device.

1. In the upper-right corner, click → **Device** to enter the Device Management page.
2. Click **Online Device** to open online device window.

All the online devices in the same subnet will display in the online device list.

3. Check the device status (shown on **Security** column) and select an inactive device.

<input type="checkbox"/> Modify NetInfo <input type="button" value="Reset Password"/> <input type="button" value="Activate"/> <input type="button" value="Refresh Every 60s"/> <input type="text" value="Filter"/>							
<input type="checkbox"/> IP	Device Type	Firmware Version	Security	Server Port	Device Serial No.	Start Time	Added
<input type="checkbox"/>	DS-7608N-F1/W	V3.4.97build 180509	Active	8000		2004-01-29 22:40:56	No
<input type="checkbox"/>	iDS-7732NX-K4/FA	V4.1.10build 180502	Inactive	8000		2018-05-25 15:41:14	Yes
<input type="checkbox"/>	DS-2CD4112F-I	V5.4.5build 170228	Active	8000		2018-05-10 14:48:41	Yes
<input type="checkbox"/>	iDS-96128NX-I24	V4.1.15build 180522	Active	8000		2018-05-25 09:29:02	No
<input type="checkbox"/>	DS-8104LHFH-E2/RTJ	V2.2.0build 170117	Active	8000		2018-05-25 09:33:28	No
<input type="checkbox"/>	DS-2CD3025D-IW2	V5.5.2build 180209	Active	8000		2018-05-09 23:36:39	No

Figure 2-1 Online Device

4. Click **Activate** to open the Activation dialog.
5. Create a password in the password field, and confirm the password.



Caution

The password strength of the device can be automatically checked. We highly recommend you change the password of your own choosing (using a minimum of 8 characters, including at least three kinds of following categories: upper case letters, lower case letters, numbers, and special characters) in order to increase the security of your product. And we recommend you reset your password regularly, especially in the high security system, resetting the password monthly or weekly can better protect your product.

Proper configuration of all passwords and other security settings is the responsibility of the installer and/or end-user.

6. Optional: Enable Cloud P2P service when activating the device if the device supports.

- 1) Check Enable Cloud P2P to open the Note dialog.
- 2) Create a verification code.
- 3) Confirm the verification code.
- 4) Click **Terms of Service** and **Privacy Policy** to read the requirements.
- 5) Click **OK** to enable the Cloud P2P service.

7. Click OK.

8. Optional: If the device supports, a "Set the security question and export the GUID files now?" window pops up. You can click **OK** to set the question or export the GUID file for resetting the password later.

2.1.2 Add Online Device


The active online devices in the same local subnet with the client software will be displayed on the **Online Device** page. You can click **Refresh Every 60s** to refresh the information of the online devices.

Add Single Online Device

You can add single online device to the client software.

Perform this task to add single online device to the client software.

Steps

1. In the upper-right corner, click  → **Device** to enter the Device Management page.
 2. Click **Online Device** to open the online device window.
All the online devices in the same subnet will display in the online device list.
 3. Select an online device from the online device list.
-



Note

For the inactive device, you need to create the password for it before you can add the device properly. For detailed steps, refer to **Activate Devices**.

4. Click **Add** to open the device adding window.

5. Input the required information.

Address

Input the device's IP address. The IP address of the device is obtained automatically in this adding mode.

Port

The default value is 8000.

User Name

Custom the user name of the device. Generally, the user name is admin.

Password

Enter the device password.



Caution

The password strength of the device can be automatically checked. We highly recommend you change the password of your own choosing (using a minimum of 8 characters, including at least three kinds of following categories: upper case letters, lower case letters, numbers, and special characters) in order to increase the security of your product. And we recommend you reset your password regularly, especially in the high security system, resetting the password monthly or weekly can better protect your product.

Proper configuration of all passwords and other security settings is the responsibility of the installer and/or end-user.




Note

When adding single online device for the first time, you need to enter the user name and password. After that, the device will be added using the previous user name and password by default.


6. Click **Add** to add the device.

7. **Optional:** After adding device, perform the following operation(s) if required.


Modify device information

Select a device and click  from its operation column to modify the device information, including nick name, IP address/domain name, port, user name, and password.

Refresh device information

Select a device and click  from its operation column to update the resource information of the selected device. Click **Refresh All** to update the resource information of all the added devices in the list.


Modify remote configuration

Select a device and click  from its operation column to configure further parameters.



**Note**

For details about the settings, refer to the user manual of the devices.

View device status

Select a device and click  from its operation column to view the device status including recording status, signal status, hardware status, etc.

Modify channel information

Select a device and click  to expand the channel(s) of the selected device. Click  to open the Modify Camera window. You can edit channel information, including camera name, video stream, rotation type, etc.

**Note**

For the devices which are added by Cloud P2P, the channel information are different, refer to **Add Device by Cloud P2P** for details.

Delete device


Select a device and click **Delete** to delete the device from the client.

Add Multiple Online Devices

If the online devices searched through SADP have the same user name and password, you can add them to the client software at once.

Perform this task if you need to add multiple online devices to the client software.

Steps

1. In the upper-right corner, click  → **Device** to enter the Device Management page.
2. Click **Online Device** to open online device window.
All the online devices in the same subnet will display in the online device list.
3. Select multiple online devices from online device list.

**Note**

For the inactive device, you need to create the password for it before you can add the device properly. For detailed steps, refer to **Activate Devices**.

4. Click **Add** to open the device adding window.
5. **Optional:** Enter the required information.

**Note**

If it is the first time to add the online device(s), you need to input the user name and password; If not, the selected devices will be added to the client using the previous user name and password by default.

User Name

Custom the user name of the device. Generally, the user name is admin.

Password

Enter the device password.

**Caution**


The password strength of the device can be automatically checked. We highly recommend you change the password of your own choosing (using a minimum of 8 characters, including at least three kinds of following categories: upper case letters, lower case letters, numbers, and special characters) in order to increase the security of your product. And we recommend you reset your password regularly, especially in the high security system, resetting the password monthly or weekly can better protect your product.

Proper configuration of all passwords and other security settings is the responsibility of the installer and/or end-user.


6. Click **Add** to add the devices.

7. **Optional:** After adding devices, perform the following operation(s) if required.


Modify device information

Select a device and click  from its operation column to modify the device information, including nick name, IP address/domain name, port, user name, and password.

Refresh device information

Select a device and click  from its operation column to update the resource information of the selected device. Click **Refresh All** to update the resource information of all the added devices in the list.


Modify remote configuration

Select a device and click  from its operation column to configure further parameters.



**Note**

For details about the settings, refer to the user manual of the devices.

View device status

Select a device and click  from its operation column to view the device status including recording status, signal status, hardware status, etc.

Modify channel information

Select a device and click  to expand the channel(s) of the selected device. Click  to open the Modify Camera window. You can edit channel information, including camera name, video stream, rotation type, etc.

**Note**

For the devices which are added by Cloud P2P, the channel information are different, refer to **Add Device by Cloud P2P** for details.


Delete device Select a device and click **Delete** to delete the device from the client.

2.1.3 Add Device by IP Address or Domain Name

You can add device by IP address or domain name.

Perform this task if you need to add device by IP address or domain name.

Steps

1. In the upper-right corner, click  → **Device** to enter the Device Management page.
2. Click **Add** to open the Add window.
3. Select **IP/Domain** as the adding mode.
4. Enter the required information, including nickname, IP address, port number, user name, and password.

Address

Enter the device IP address or domain name.

Port

Enter the device port No. The default value is 8000.

User Name

Enter the device user name. By default, the user name is admin.

Password

Enter the device password.




Caution








The password strength of the device can be automatically checked. We highly recommend you change the password of your own choosing (using a minimum of 8 characters, including at least three kinds of following categories: upper case letters, lower case letters, numbers, and special characters) in order to increase the security of your product. And we recommend you reset your password regularly, especially in the high security system, resetting the password monthly or weekly can better protect your product.

Proper configuration of all passwords and other security settings is the responsibility of the installer and/or end-user.

5. Add device to the client software.
 - Click **Add** to add the device and return to the device list.
 - Click **Add and Continue** to add the device and continue to add the next device.
6. **Optional:** After adding device, perform the following operation(s) if required.

Modify device information

Select a device and click  from its operation column to modify the device information, including nick name, IP address, port, username, and password.

Refresh device information	Select a device and click  from its operation column to update the resource information of the selected device. Click Refresh All to update the resource information of all the added devices in the list.
Modify remote configuration	Select a device and click  from its operation column to configure further parameters. <hr/> <div> Note For details about the settings, refer to the user manual of the devices.</div>
View device status	Select a device and click  from its operation column to view the device status including recording status, signal status, hardware status, etc.
Modify channel information	Select a device and click  to expand the channel(s) of the selected device. Click  to open the Modify Camera window. You can edit channel information, including camera name, video stream, rotation type, etc. <hr/> <div> Note For the devices which are added by Cloud P2P, the channel information are different, refer to Add Device by Cloud P2P for details.</div>
Delete device	Select a device and click Delete to delete the device from the client.

2.1.4 Add Device by Cloud P2P


You can add the devices to the client via Cloud P2P domain.

Before You Start

Log in to Cloud P2P account first. Refer to **Log in to Cloud P2P Account** for more details.

Perform this task when you need to add device by Cloud P2P domain.

Steps

1. In the upper-right corner, click  → **Device** to enter the Device Management page.
2. Click **Add** to open the Add window.
3. Select **Cloud P2P** as the adding mode.

The logged-in Cloud P2P account is displayed.

4. Enter the device serial number or get it automatically.
 - Enter the serial number which you can find on the device label.
 - If the IP address of the device is in the same local subnet with the software, click **Online Device** and select the online device to get its serial number automatically.

5. Enter the verification code created when activating the device and enabling the Cloud P2P service .
6. **Optional:** Enable **DDNS** to access the device by DDNS.

Device Domain Name

Custom the device domain name, which is used to get the IP address and port of the device registered on Cloud P2P server.

UPnP Mode

Auto

Select **Auto** as the UPnP Mode to get the port number of the device automatically.

Manual

Select **Manual** as the UPnP Mode, and you need to input the port number of the device manually.

User Name

Enter the device user name. By default, the user name is admin.

Password

Enter the device password, which is created when you activate the device.



Note



If DDNS function is disabled, you cannot do some operations for the added device through client, such as viewing the device status, downloading the video files during remote playback, etc.

7. Add device to the client software and Cloud P2P account.
 - Click **Add** to add the device and return to the device list.
 - Click **Add and Continue** to add the device and continue to add the next device.
-



Note

If the client cannot connect the DDNS for three times, the device will be added by P2P.

8. **Optional:** Modify channel information.
 - 1) Select a device and click  to expand the channel.
 - 2) Click  to open the Modify Camera window.
 - 3) Edit channel information, including name, rotate type, image quality, etc.

Rotate Type

Select the rotate type for the live view or playback of the camera as desired.


- 4) **Optional:** Click **Copy to** to copy the configured parameters to other camera(s).
- 5) Click **OK** to edit the camera.

2.1.5 Import Devices in a Batch

The devices can be added to the software in batch by inputting the device information in the pre-defined CSV file.

Perform this task to import devices in a batch.

Steps

1. Click  in the upper-right corner and click **Device** tab to enter the Device Management page.
2. Click **Add** to open the Add window.
3. Select **Batch Import** as the adding mode.
4. Click **Export Template** and then save the pre-defined template (CSV file) on your PC.
5. Open the exported template file and input the required information of the devices to be added on the corresponding column.

Adding Mode

You can enter **0** as the adding mode, which indicates that the device is added by IP address or domain name.

Address

Enter the IP address or domain name of the device.

Port

Enter the device port No. The default value is 8000.

User Name

Enter the device user name. By default, the user name is admin.

User Name


Input the device password.











Caution

The password strength of the device can be automatically checked. We highly recommend you change the password of your own choosing (using a minimum of 8 characters, including at least three kinds of following categories: upper case letters, lower case letters, numbers, and special characters) in order to increase the security of your product. And we recommend you reset your password regularly, especially in the high security system, resetting the password monthly or weekly can better protect your product.

Proper configuration of all passwords and other security settings is the responsibility of the installer and/or end-user.

6. Click  and select the template file.
7. Click **Add** to import the devices.
8. **Optional:** After adding device, perform the following operation(s) if required.

Modify device information	Select a device and click  from its operation column to modify the device information, including nick name, IP address/domain name, port, user name, and password.
Refresh device information	Select a device and click  from its operation column to update the resource information of the selected device. Click Refresh All to update the resource information of all the added devices in the list.
Modify remote configuration	Select a device and click  from its operation column to configure further parameters.
<hr/> <div>  Note </div> <p>For details about the settings, refer to the user manual of the devices.</p> <hr/>	
View device status	Select a device and click  from its operation column to view the device status including recording status, signal status, hardware status, etc.
Modify channel information	Select a device and click  to expand the channel(s) of the selected device. Click  to open the Modify Camera window. You can edit channel information, including camera name, video stream, rotation type, etc.
<hr/> <div>  Note </div> <p>For the devices which are added by Cloud P2P, the channel information are different, refer to Add Device by Cloud P2P for details.</p> <hr/>	
Delete device	Select a device and click Delete to delete the device from the client.

2.2 Edit Device's Network Information


After activating device, you can edit the network information for the online device.

Before You Start

Activate the device if the device status is inactivated.

Perform this task if you want to edit the network information of activated online device.

Steps

1. In the upper-right corner, click  → **Device** to enter the Device Management page.
2. Click **Online Device** to open online device window.
3. Select an activated device in the online device list.
4. Click **Modify Netinfo** to open the Modify Network Parameter window.
5. Change the network parameters of the device.
 - Check **DHCP** to get the device IP address, port and other network information automatically.

- Uncheck **DHCP** and edit the IPv4 of IPv6 parameters manually.
6. Enter the password created when you activate the device.
 7. Click **OK** to complete the network settings.

2.3 Restore/Reset Device Password


If you forgot the password of the detected online devices, you can restore the device's default password or reset the device's password through the client .

2.3.1 Reset Device Password

If you forgot the password of the detected online devices, you can reset the device password through the client.

Perform this task if you want to reset the device password.

Steps

1. On the menu bar, click  → **Device** to enter the Device Management page.
2. Click **Online Device** and the Online Device window pops up.
3. Select the device from the list and click **Reset Password**.
4. Reset the device password.
 - If the window with Export button, password, and confirm password field pops up, click **Export** to save the device file on your PC and then send the file to our technical support.

Note

For the following operations for resetting the password, contact our technical support.

- If the window with **Export** and **Generate** buttons, password and confirm password field pops up, click **Generate** to pop up the QR Code window and click **Download** to save the QR code to your PC. You can also take a photo of the QR code to save it to your phone. Send the picture to our technical support.

Note

For the following operations for resetting the password, contact our technical support.

- If the window with safe mode selectable pops up, select the Safe Mode according to actual needs.

Note

For the following operations for resetting the password, contact our technical support.



Caution

The password strength of the device can be automatically checked. We highly recommend you change the password of your own choosing (using a minimum of 8 characters, including at least three kinds of following categories: upper case letters, lower case letters, numbers, and special characters) in order to increase the security of your product. And we recommend you reset your password regularly, especially in the high security system, resetting the password monthly or weekly can better protect your product.


Proper configuration of all passwords and other security settings is the responsibility of the installer and/or end-user.

2.3.2 Restore Device's Default Password

For some old version device, if you forgot the password of the detected online devices, you can restore the device's default password through the client.

Perform this task if you want to restore the device password to the default one for the old version device.

Steps

1. On the menu bar, click  → **Device** to enter the Device Management page.
2. Click **Online Device** and the Online Device window pops up.
3. Select the device from the list and click **Reset Password**.
4. Restore the device password.
 - If the window with security code field pops up, input the security code, and then you can restore the default password of the selected device.



Note

For getting the security code, contact our technical support.

- If the window with **Import** and **Export** buttons pops up, click **Export** to save the device file on your PC and send the file to our technical support.
-



Note

For the following operations for resetting the password, contact our technical support.

What to do next

The default password (12345) for the admin account is for first-time login purpose only. You must change this default password to better protect against security risks, such as the unauthorized access by others to the product that may prevent the product from functioning properly and/or lead to other undesirable consequences.

Caution

The password strength of the device can be automatically checked. We highly recommend you change the password of your own choosing (using a minimum of 8 characters, including at least three kinds of following categories: upper case letters, lower case letters, numbers, and special characters) in order to increase the security of your product. And we recommend you reset your password regularly, especially in the high security system, resetting the password monthly or weekly can better protect your product.


Proper configuration of all passwords and other security settings is the responsibility of the installer and/or end-user.


2.4 Upgrade Device Firmware Version

When the new firmware version for the added network camera available, you can upgrade the firmware version via the client.

Perform this task if you need to upgrade the added device's firmware version.

Steps

1. In the upper-right corner, click  → **Device** to enter the Device Management page.
2. In the added device list, if there is a new firmware version available, the status in the Firmware Upgrade column of the device will turn to **Upgradeable**.

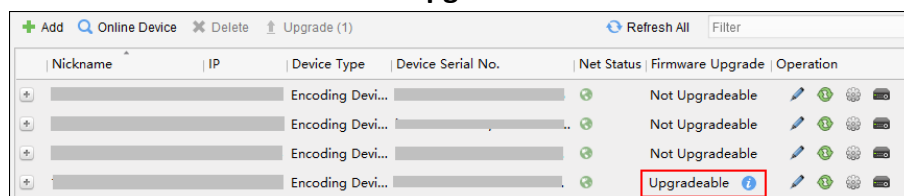


















Nickname	IP	Device Type	Device Serial No.	Net Status	Firmware Upgrade	Operation
+		Encoding Devi...		+	Not Upgradeable	   
+		Encoding Devi...		+	Not Upgradeable	   
+		Encoding Devi...		+	Not Upgradeable	   
+		Encoding Devi...		+	Upgradeable	   

Figure 2-2 Upgrade Device Firmware Version

Note

Status in the Firmware Upgrade column: **Network Disconnected**, **Upgradeable** (a new firmware version available), **Not Upgradeable** (no firmware version available), **Waiting** (wait for upgrade), **Upgraded**, and **Upgrading Failed**.

3. **Optional:** Move the cursor to the  to view the current version, latest version, and upgrade content of the firmware version.
4. Select the upgradeable device and click **Upgrade** to start upgrading the device firmware.
The upgrade progress will show. When the upgrade is completed, the status in the Firmware Upgrade column of the device will turn to **Upgraded**.

2.5 Control Alarm Output

An alarm output is an output on the device that can be connected to an peripheral device, such as a light, a barrier, etc. Device can send signal to control the connected external device, e.g., turn on light, open the barrier gate. The connected peripheral device can be controlled automatically by events or alarms, or manually by client, and here we introduce the process for controlling alarm output remotely by client.

In the menu bar, select  → **Tool** → **Alarm Output Control** , click the button to control (enable or disable) the alarm output.


2.6 Broadcast to Connected Devices

Perform the broadcast function to distribute audio content to the added device if the device has an audio output.



Note

- Your PC should have available microphone for broadcasting audio to the device.
 - If the client is performing two-way audio with the device's camera, you cannot start broadcast with the device, and vice versa.
 - The Cloud P2P device supports broadcast if it enables DDNS.
-

In the menu bar, select  → **Tool** → **Broadcast** , select the device(s) to broadcast to and click **OK**. Then you can broadcast audio to the selected device through the microphone.

For stopping broadcasting, select  → **Tool** → **Broadcast** , deselect the device(s) that you want to cancel broadcast and click **OK**.

Chapter 3 Cloud P2P


The client software also supports to register a Cloud P2P account, log into your Cloud P2P account and add the devices which support the Cloud P2P service.

3.1 Register a Cloud P2P Account

The client software supports registering a Cloud P2P account to manage devices which supports Cloud P2P service.


Perform this task when you want to register a Cloud P2P account via the client software.

Steps


1. Enter the Cloud P2P Login page.
 - 1) In the upper-right corner, click  → **Device** to enter the Device Management page.
 - 2) Click **Add** to open the Add window.
 - 3) Select **Cloud P2P Domain** as the adding mode.
 - 4) Select the region where the Cloud P2P account registered.
 - 5) Click **Login** to open the Login page.



Note

You can also click the icon  in the upper-right corner to open the login page.

2. Click **Register** to open Register Account window.

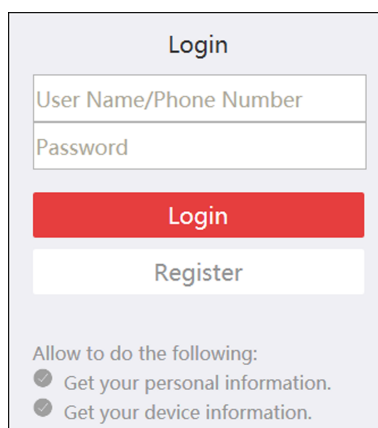

The screenshot shows a 'Login' window with a light blue header. Below the header are two input fields: 'User Name/Phone Number' and 'Password'. Under these fields are two buttons: a red 'Login' button and a white 'Register' button. At the bottom, there is a section titled 'Allow to do the following:' with two radio button options: 'Get your personal information.' and 'Get your device information.'.

Figure 3-1 Register a Cloud P2P Account



Note

The web browser should be Internet Explorer version 9 and later.

3. Enter the required information, including user name, password, confirm password, and phone number/email address.



Caution

The password strength of the device can be automatically checked. We highly recommend you change the password of your own choosing (using a minimum of 8 characters, including at least three kinds of following categories: upper case letters, lower case letters, numbers, and special characters) in order to increase the security of your product. And we recommend you reset your password regularly, especially in the high security system, resetting the password monthly or weekly can better protect your product.

Proper configuration of all passwords and other security settings is the responsibility of the installer and/or end-user.

4. Click **Send Message** to get verification code.

The system will send verification code to your phone or email.

5. Enter the received verification code in the **Verification Code** text field.
6. Click **Register** to finish the registration.

3.2 Log in to Cloud P2P Account

You can log in to Cloud P2P account via the client software.

Before You Start

Register a Cloud P2P account.




Note

For details, refer to ***Register a Cloud P2P Account***.

Perform this task when you want to log in to the registered Cloud P2P account via client software.

Steps

1. Enter the Cloud P2P Login page.
 - 1) In the upper-right corner, click  → **Device** to enter the Device Management page.
 - 2) Click **Add** to open the Add window.
 - 3) Select **Cloud P2P Domain** as the adding mode.
 - 4) Select the region where the Cloud P2P account registered.
 - 5) Click **Login** to open the Login page.
-



Note

You can also click the icon  in the upper-right corner to open the login page.





2. Enter user name/phone number, and password.
3. Click **Login** to log into your account.

The device(s) under the Cloud P2P account will be added to the client.
4. **Optional:** Click **Switch Account** to log in to another Cloud P2P account.

Chapter 4 Live View

For the surveillance task, you can view the live video of the added network cameras and video encoders on the Main View page. And some basic operations are supported, including picture capturing, manual recording, PTZ control, etc.

The following icons show different statuses of the camera.

	The camera is online and works properly.
	The camera is in live view.
	The camera is in recording status.
	The camera is offline.

4.1 Start and Stop Live View

You can start the live view of one camera or of all cameras that connected to one encoding device. You can also start the live view in default or custom view mode.



If the camera's stream is encrypted, you are required to enter the camera's stream key to start live view.

4.1.1 Start Live View for One Camera

You can start the live view of only one camera.

Perform this task if you want to start the live view of one camera.

Steps

1. Open the Main View page.
2. **Optional:** Click  in live view toolbar to select the window division mode for live view.
3. **Optional:** Click  to set the view scale of the live view window. You can set it as **Full Screen**, **4:3**, **16:9**, or **Original Resolution**.



Note

You can also set the view scale for both live view and playback window in System Configuration. For details, refer to ***Set Live View and Playback Parameters***.

4. Do one of the following operations to start the live view of one camera.
 - Drag a camera from camera list to a display window to start the live view.
 - Double-click the camera name after selecting a display window to start the live view.

Note

If the live view or video file(s) of its camera(s) is encrypted, you should input the stream key.

5. **Optional:** Drag the video of the camera in live view to another window to change the display window for live view.
 6. **Optional:** Right click on the camera name in the camera list to switch the stream type according to actual needs.
-

Note

You can click **All Stream Types** to select the frequently used stream types to display on the right-click menu.

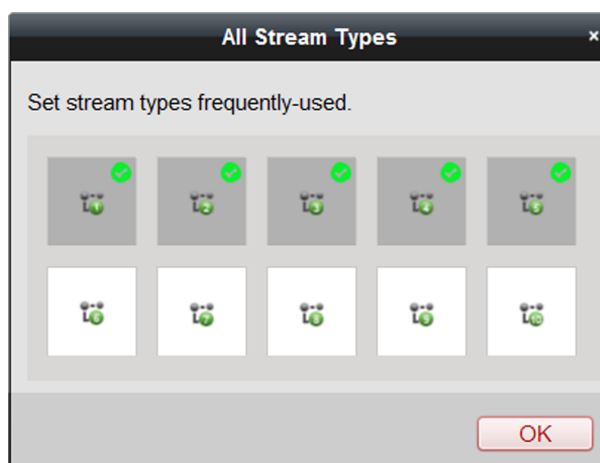



Figure 4-1 Select Frequently Used Stream Types

4.1.2 Start Live View in Default View Mode



The video of the added cameras can display in different view modes. Four frequently-used default view modes are selectable: 1-Window, 4-Windows, 9-Windows, and 16-Windows.

Perform this task when you want to start live view in default view mode.

Steps

1. Open the Main View page.
2. Click  to expand the default view list in the View panel.
3. Select the default view mode.



The video of the added cameras displays in a sequence in the selected view.

4. **Optional:** Click   to set the view scale of the live view window. You can set it as **Full Screen**, **4:3**, **16:9**, or **Original Resolution**.

Note

You can also set the view scale for both live view and playback window in System Configuration. For details, refer to ***Set Live View and Playback Parameters*** .

5. Optional: Perform the following operation(s) after starting live view in default mode.



Start Instant Playback	Move the cursor over the view and click  to start the instant playback of the view, see <i>Instant Playback</i> for details.
Start Auto-Switch	Move the cursor over the view and click  to start switching automatically of the view, see details in <i>Auto-Switch in Live View</i> .

4.1.3 Add Custom View

You can customize the view mode for live view.



Perform this task when you want to add custom view for live view.



Steps

1. Open the Main View page.
 2. Click  in the View panel to create a new view.
 3. Input a name for the view as desired.
 4. Click **Add** to add the view.
 5. **Optional:** Click  in the live view toolbar to set window division mode for the new view.
-

Note

By default, the new view is in 4-window division.

6. Perform one of the following operations to save the new view settings.
 - Click  to directly save the view.
 - Click  to save the view as another custom view.
7. **Optional:** Perform the following operations after adding the custom view.

Edit View Name	Move the cursor over the new view and click  to edit the view name.
Delete View	Move the cursor over the new view and click  to delete the view.

4.1.4 Start Live View in Custom View Mode




You can display the video of added cameras in custom view mode.

Before You Start

Customize view modes and add them to the client software. See ***Add Custom View*** for details.



Perform this task when you want to start live view in custom view mode.

Steps

1. Open the Main View page.
2. **Optional:** Click    to set the view scale of the live view window. You can set it as **Full Screen**, **4:3**, **16:9**, or **Original Resolution**.

**Note**

You can also set the view scale for both live view and playback window in System Configuration. For details, refer to ***Set Live View and Playback Parameters***.

3. Click  to expand the custom view list in the View panel.
4. Click a custom view and the cameras in this custom view will start live view according to the pre-defined window division.
5. **Optional:** Move the cursor over the view and click  to start instant playback of the view.

4.1.5 Stop Live View



After starting the live view, you can stop it as desired.

Before You Start

Start the live view.

Perform this task when you want to stop the live view.

Steps

1. Select a live view display window on Main View page.
2. Perform one of the following operations to stop the live view.
 - Move the cursor over the display window and click  appeared at the upper-right corner to stop the live view of this display window.
 - Right-click on the display window to open right-click menu and click **Stop Live View** on the menu to stop live view.
 - Click  in live view toolbar to stop all the live view.

4.2 Auto-Switch in Live View

You can auto-switch cameras or views in live view module.

When auto-switching in live view, three modes are available:



- Auto-Switch All Cameras in Default View
- Auto-Switch Cameras of a Device
- Auto-Switch Custom Views

4.2.1 Auto-Switch All Cameras in Default View

The video of all the cameras in the camera list can switch automatically in the selected default view.

Perform this task when you need to auto-switch all cameras in default view.



Steps

1. Open the Main View page.
2. Click  in the toolbar and select or customize the switching interval.
3. Select a default view to click  on the selected view node.

All cameras in the camera list start auto-switching in the selected default view.

4. **Optional:** Perform the following operation(s) after starting auto-switching all cameras in the default view.

Pause/Resume Auto-Switch

Click  /  to pause/resume auto-switching all cameras in default view.

View Previous/Next Video

Click  /  to view the live video of previous or next camera.

4.2.2 Auto-Switch Custom Views



The configured custom views can switch one by one automatically.

Before You Start

Add the custom views, see **Add Custom View** for details.

Perform this task when you need to auto-switch custom views.



Steps

1. Open the Main View page.
2. Click  in the toolbar and select the switching interval.
3. Click  on the Custom View node.

All configured custom views starts auto-switching.

4. **Optional:** Perform the following operation(s) after starting auto-switching custom views.

Pause/Resume Auto-Switch

Click  /  to pause/resume auto-switching custom views.

View Previous/Next Video



Click  /  to view the live video of previous or next camera.

4.2.3 Auto-Switch Cameras of a Device

The video stream of the cameras that connected to the same encoding device (such as an NVR) can be switched automatically in a selected display window.

Perform this task when you need to auto-switch cameras of a device.

Steps



1. Open the Main View page.
2. Select a display window for auto-switch.
3. Click  in the toolbar to select or customize the switching interval.
4. Select a device and click  on the device node.

The cameras of the selected device start auto-switch in the display window.

**Note**

The audio is off by default after auto-switch starts.

5. **Optional:** Perform the following operation(s) after starting auto-switching cameras in a group.

Pause/Resume Auto-Switch Click  /  to pause/resume auto-switching custom views.

View Previous/Next Video Click  /  to view the live video of previous or next camera.

4.3 PTZ Control

The software provides PTZ control for cameras with pan/tilt/zoom functionality. During the PTZ control, you can set preset, patrol, and pattern.

**Note**



Cloud P2P device only supports the PTZ movement to the directions of up, down, left, and right.


4.3.1 Configure Preset


A preset is a predefined image position which contains information of pan, tilt, focus and other parameters.

Perform this task when you need to add a preset for the PTZ camera.

Steps

1. Open the Main View page and start the live view of the PTZ camera.
2. Click  to expand the PTZ Control panel.
3. Click **Preset** to enter the PTZ preset configuration panel.
4. Click the direction buttons and other buttons on the PTZ control panel to steer the camera to the desired view.
5. Select a PTZ preset number from the preset list and click  to open a dialog.
6. Input the name of the preset in the dialog.
7. Click **OK**.
8. **Optional:** Perform the following operation(s) after setting the preset

Call Preset Double-click the configured preset in the list, or select the preset and click  to call the preset.

Edit Preset Select the configured preset from the list and click  to edit it.

For Cloud P2P device, you can only edit the preset name.

Delete Preset Select the configured preset from the list and click  to delete it.

4.3.2 Configure Patrol

A patrol is a scanning track specified by a group of user-defined presets, with the scanning speed between two presets and the dwell time at the preset separately programmable.

Before You Start

Add two or more presets for one PTZ camera.



Perform this task when you need to add a patrol for the PTZ camera.

Steps



Note


For Cloud P2P device, the patrol function is not supported.

1. Open the Main View page and start the live view of PTZ camera.
2. Click  to expand the PTZ Control panel.
3. Click **Patrol** to enter the PTZ patrol configuration panel.
4. Select a path No. from the drop-down list.
5. Click  to open Add Patrol No. dialog.
6. Set the dwell time and patrol speed for the preset in the dialog.
7. Click **OK**.
8. Repeat step 5, 6, and 7 to add other presets to the patrol.
9. **Optional:** Perform the following operation(s) after setting the patrol.


Call Patrol

Click  to call the patrol.


Stop Calling Patrol

Click  to stop calling the patrol.

Edit Preset in Patrol

Select a preset in the patrol path and click  to edit the preset.

Remove Preset from Patrol

Select a preset in the patrol path and click  to remove the preset from the patrol.

4.3.3 Configure Pattern

A pattern is a memorized, repeating series of pan, tilt, zoom, and preset functions.




Perform this task when you need to add a pattern for the PTZ camera.





Steps



Note

For Cloud P2P device, the pattern function is not supported.

1. Open the Main View page and start the live view of the PTZ camera.
2. Click  to expand the PTZ Control panel.
3. Click **Pattern** to enter the PTZ pattern configuration panel.
4. Click  to start the recording of this pattern path.
5. Use the direction buttons to control the PTZ movement.
6. Click  to stop recording and save the recorded pattern.
7. **Optional:** Perform the following operation(s) after setting the pattern.

Call Pattern	Click  to call the pattern.
Stop Calling Pattern	Click  to stop calling the pattern.
Delete Pattern	Select one pattern and click  to delete the pattern.
Delete All Patterns	Click  to delete all patterns.

4.4 Manually Record and Capture

During live view, you can record videos and capture pictures manually, and then view the recorded video files and captured pictures in the local PC.

4.4.1 Manually Record Video

Manual recording function allows to record the live video on the Main View page manually, and you can store the video files in the local PC.


Perform this task when you need to record videos manually.




Steps



Note

The manual recording is not supported by the Cloud P2P device during live view.

1. Open the Main View page.
2. Start the live view
3. Perform one of the following operations to start manual recording.
 - Move the cursor to the display window in live view to show the toolbar and click  on the toolbar.
 - Right-click on the display window and click **Start Recording** on the right-click menu.

The icon  turns to . An indicator  appears in the upper-right corner of the display window.

4. Click  to stop the manual recording.

The recorded video file is automatically saved to the local PC, and a small window with the saving path information appears in the lower-right corner of desktop.



Note



The saving path of the recorded video files can be set on the System Configuration page. See **Set File Saving Path** for details.

4.4.2 View Local Videos

You can view the video files which are recorded manually during live view and playback and are stored in your local PC.

Perform this task when you need to view the video files recorded during live view and playback.

Steps

1. Click  → **File** → **Open Video File** in the upper-left corner to open the Video Files page.
2. Select the camera to be searched from the Camera list.
3. Click  to specify the start time and end time for the search.
4. Click **Search**.

The video files recorded between the start time and end time displays in thumbnail format on the page.

5. **Optional:** Perform the following operation(s) after the search.


- | | |
|--------------------------|---|
| Delete Video File | Select the video file, and click Delete to delete the video file. |
| Save Local Video | Select the video file, and click Save as to save a new copy of the video file. |
| Playback | Double-click the video file to start the local playback. |

4.4.3 Capture Pictures

During live view, you can take a quick snapshot of an image for the live video manually if you want to save or share a still image.

Perform this task when you need to capture pictures during the live view.

Steps

1. Open Main View page and start the live view of a camera.
2. Perform one of the following operations to capture pictures.
 - Move the cursor to the display window in live view to show the toolbar and click  on the toolbar.
 - Right-click the display window and click **Capture** on the right-click menu.

The captured picture is automatically saved to the local PC, and a small window with the picture preview and saving path information appears in the lower-right corner of desktop.

**Note**



The saving path of the captured pictures can be set on the System Configuration page. For details, refer to ***Set File Saving Path***.

4.4.4 View Captured Pictures

The pictures captured in live view and playback are stored in the PC running the software. You can view the captured pictures if needed.

Perform this task when you need to view the pictures captured during live view and playback.

Steps

1. Click  → **File** → **Open Image File** in the upper-right corner to open the Captured Images page.
2. Select the camera to be searched from the Camera list.
3. Click  to specify the start time and end time for the search.
4. Click **Search**.

The pictures captured between the start time and end time display in thumbnail format on the page.

5. **Optional:** Perform the following operation(s) after the search.

- | | |
|------------------------|---|
| Enlarge Picture | Double-click the picture thumbnail to enlarge it for a better view. |
| Print Picture | Select the captured picture, and click Print to print the selected picture. |
| Delete Picture | Select the captured picture, and click Delete to delete the selected picture. |
| Save Picture | Select the captured picture, and click Save as to save a new copy of the selected picture. |

4.5 Instant Playback


Instant playback shows a piece of the video which is remarkable, or which is unclear on the first sight. You can play the video files instantly on the Main View page and get an immediate review if needed.


Before You Start

Record the video files and store them on the storage devices, such as the SD/SDHC cards and HDDs on the DVRs, NVRs, network cameras, etc.

Perform this task when you need to start the instant playback.

Steps

1. Open Main View page and start the live view.
2. Perform one of the following operations to show the pre-play durations' list of instant playback.
 - Move the cursor to the display window to show the toolbar and click .
 - Right-click the display window and select **Switch to Instant Playback** on the right-click menu.

- Move the cursor to default view or custom view node on the View panel and click .

The list with pre-play durations of 30s, 1 min, 3 min, 5 min, 8 min, and 10 min displays.

3. Select a time period from the appeared list to start the instant playback.

Example

If you select 3 min, and the current time of the live view is 09:30:00, then the instant playback will start from 09:27:00.

During the instant playback, an indicator  appears in the upper-right corner of the display window.

4. **Optional:** Click  again to stop the instant playback and go back for the live view.

4.6 Customize Window Division

The client software provides multiple kinds of predefined window divisions. You can also set custom the window division as desired.


Perform this task when you need to customize the window division.

Steps



Note

Up to 5 window divisions can be customized.

1. Open the Main View or Remote Playback page.
 2. Click  on the live view or playback toolbar.
 3. Select **Edit** to open the custom window division page.
 4. Click **Add** to open the Add Custom Window Division dialog.
 5. Set a name for the new window division as desired and click **OK**.
 6. Select the window division as 3×3, 4×4, 5×5, or 6×6.
-



Note

For remote playback, up to 16 windows can be played at the same time, so the custom window division with more than 16 windows is invalid.

7. **Optional:** Drag your mouse to select the adjacent windows, and click **Joint** to joint them as a whole window.
8. Click **Save**.


What to do next

Click  to go back to the Main View or Remote Playback page.

4.7 More Functions

There are some more functions supported in the live view, such as auxiliary screen preview, digital zoom, channel-zero, two-way audio, camera status, and synchronization.

Auxiliary Screen Preview

Click  and select **Auxiliary Screen Preview** to open an auxiliary screen to display the live video on different auxiliary screens for the convenient preview of multiple monitoring scenes.



Note

Up to 3 auxiliary screens are supported.

Digital Zoom

Right-click on the displaying window and select **Open Digital Zoom** and the cursor changes to a magnifier. Drag the mouse to draw a rectangle area in the lower-right/upper-left direction to zoom in or out the drawn area. Or use the mouse wheel to zoom in or out the view in digital zoom mode.

Channel-Zero

When you view the live video of channel-zero of the device, hold the **Ctrl** key and double-click to display the specific channel. Hold the **Ctrl** key and double-click again to restore.

Two-Way Audio

Two-way audio function enables the voice talk of the camera. You can get not only the live video but also the real-time audio from the camera. If the device has multiple two-way audio channels, you can select a channel to start two-way audio. Right-click on the displaying window and select **Start Two-Way Audio** and then you can talk to the camera.



Note

- The two-way audio can be used for only one camera at one time.
 - Cloud P2P device doesn't support selecting channel during two-way audio.
 - Your PC should have available microphone for talking to the camera or device.
 - If client is broadcasting to the device, you cannot start two-way audio with the camera, and vice versa.
-

Camera Status

The camera status, such as recording status, signal status, connection number, etc., can be detected and displayed for checking. The status information refreshes every 10 seconds. Right-click on the displaying window and select **Camera Status**, or right-click the camera on the camera tree and select **Camera Status** to show the camera status window.

Synchronization

The synchronization function provides a way to synchronize the device clock with the PC which runs the client software. Right-click on the displaying window and select **Synchronization**, or right-click the camera on the camera tree and select **Synchronization** to synchronize the time.

Modify Camera Name

Right-click the camera on the camera tree and select **Modify Camera Name** if you want to customize the camera name.

Chapter 5 Remote Playback

You can search the video files stored in the local device or on the storage devices configured on the device, and then play them on the client.

If the camera's stream is encrypted, you are required to enter the camera's stream key to start playback.

5.1 Asynchronous Playback

You can search video files recorded by camera (s) for playback and play them individually.

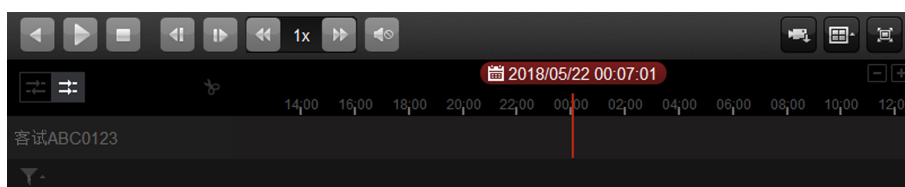


Figure 5-1 Playback Toolbar

We introduce part of the icons on the playback toolbar:

Icon	Name	Description
	Single Frame (Reverse)	Play the video files frame by frame (reversely). You can also scroll down the mouse wheel to play the video file frame by frame (reversely).
	Download for Multiple Cameras	Download video files of multiple cameras at the same time.
	Clip and Download	Download the video files of the camera and store them to local PC.
	Accurate Positioning	Set the accurate time point to play the video file.
	Date	The day that has video files will be marked with .

Note

The Cloud P2P device doesn't support the functions of reverse playback, slow forward, and fast forward.

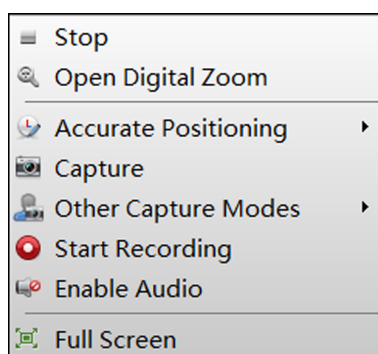


Figure 5-2 Right-Click Menu of Playback Display Window

Icon	Name	Description
	Other Capture Modes	Print Captured Picture Capture a picture and print it. Custom Capture Capture the current picture. You can edit its name and then save it.

5.1.1 Search Video Files

You can search the video files recorded by cameras by setting the time period. The video files during the time period can be played back.

Perform this task if you need to search video files for playback.

Steps

1. Open the Remote Playback page.
2. **Optional:** Click to set the start date and end date of searching time period.

Note

In the calendar, the date which has video files recorded by schedule will be marked with , and the date which has video files recorded based on event will be marked with .

3. Select a display window, and select the camera(s) in the camera list for playback.
4. Click **Search**.
5. Start the playback of camera(s) to search the video files of the selected camera(s). You can do one of the followings to start the playback.

Note

- You can also drag a device node to the display window to start playback for the cameras of the device.
- Up to 16 cameras can be searched simultaneously.

The client will playback the matched video files automatically in chronological order.

5.1.2 Play Video Files



After searching the video files for the playback, you can play the video via timeline.

Perform this task if you need to play the video files.

Steps

1. Open the Remote Playback page.
2. Select the camera and set the time period to search the recorded video files.
3. Click **Search**.
4. Click on the timeline to position the desired video segment of specified time for normal playback.



- The timeline indicates the time duration for the video files, and the video files of different types are color coded.
 - You can use mouse wheel or click  /  to scale up or scale down the timeline bar.
-

5.2 Synchronous Playback


During synchronous playback, you can view the recorded video footage from up to 16 cameras at the same point of time simultaneously. If the camera has no video footage at certain point of time, its playback will stop and it will wait for other cameras playing back video footage until the time it has recorded video footage. For example, if you wish to view the video footage shot by camera A, B, and C at 8:00 a.m., you can use synchronous playback instead of examining the video footage from each camera individually. If camera A has no video footage during 8:00 a.m. to 8:05 a.m., its playback will be paused and other cameras' (B and C) will be normal. When it is 8:00 a.m., the camera A will start playing its video footage as well.

Perform this task when you need to play the video files in synchronization.

Steps



Video files from up to 16 cameras can be played back simultaneously.

1. Open the Remote Playback page.
2. Select at least two cameras and set the time period for search.
3. Click **Search**.
4. Start synchronous playback.
 - After running the client, the playback mode is synchronous playback by default.
 - If it is asynchronous playback mode, click  in the toolbar to enable synchronous playback.

Chapter 6 Download Video Files

During playback, you can set the start time and end time to clip the video files of one camera or multiple cameras and download them to the local PC.



Note

You cannot download the video files of Cloud P2P device.

6.1 Download for One Camera

During the playback, you can clip the video footage by setting the start time and end time. After clipping, the video footage will be downloaded to the local PC.


Perform this task to download the recorded video files for one camera and save the video files in your PC.


Steps



Note

To set the default saving path, refer to ***Set File Saving Path***.

1. Enter the Remote Playback page and select the camera to start playback.
2. Select the camera's display window and click  on the playback toolbar.
3. Set the start time and end time. The video footage during the start time and end time will be clipped and saved in the default file saving path in the PC running the client.
4. Set a name for the downloading task.
5. **Optional:** Check **Download Player** to download the video player with the video footage. You can play the video with the provided player.
6. Click **OK** to start downloading.

The icon  will display on the client menu bar in the upper right corner. You can view the downloading process and delete the task is necessary.

6.2 Download for Multiple Cameras

During the playback of multiple cameras, you can download the video files of multiple cameras by date simultaneously.

Perform the following steps to download the video files of multiple cameras by date simultaneously.


Steps

1. Enter Playback page and select multiple cameras to start playback.



Note

For details about starting playback, refer to *Remote Playback* .

2. Click  to open the Download for Multiple Cameras page.
3. Check the cameras to enable the corresponding video duration settings.
4. Set the start time and end time of video duration for each camera.
5. **Optional:** Check **Download Player** to download the player.
6. Click **Download** to start downloading the video files of the configured duration(s) to the local PC.

The progress bar shows the downloading process.

7. **Optional:** Click **Stop** to stop downloading manually.
-



Note

Up to 16 cameras' video files can be downloaded simultaneously.

Chapter 7 System Configuration

Configure the settings for the client software, such as network performance, picture format, saving path for the videos and pictures, icon of live view and playback toolbar settings.

7.1 Set General Parameters

You can configure the frequently-used parameters, including network performance, time synchronization, and etc.

Perform the following task when you need to set the above mentioned parameters.

Steps

1. Click  in the upper-right corner and click **System** tab to enter the System Configuration page.
2. Configure the general parameters.

Network Performance

Set the network conditions to **Normal**, **Better** or **Best**.

Maximum Mode

Select **Maximize** or **Full Screen** as the maximum mode. **Maximize** mode can maximize the display and show the taskbar. **Full Screen** mode can display the client in full-screen mode.

Enable Auto-login

Log into the client software automatically.

Pop up Security Prompt When Using Default Password

If the default password of the added device has not been changed, the prompt will pop up for notification.

Automatic Time Synchronization

Automatically synchronize the time of the added devices with the time of the PC running the client at a specified time point.

Automatically Detect Device's Latest Firmware Version

The client can detect the latest firmware versions for the added devices automatically. When the new firmware version is available, it will prompt the users to upgrade.

Upgrade Server Port

The port number of the PC that running the upgrade server. It should be between 1 and 65535. By default, it is 15200.


3. Click **Save**.

7.2 Set Live View and Playback Parameters

You can set the parameters for live view and playback, including picture format, pre-play duration, etc.

Perform the following task when you need to set the parameters for live view and playback.

Steps

1. Click  in the upper-right corner and click **System** tab to enter the System Configuration page.
2. Click **Live View and Playback** in the navigation.
3. Configure the live view and playback parameters.

Picture Format

Set the format for the captured pictures captured during live view and playback.

Merge Downloaded Video Files

Set the maximum size of merged video file for downloading the video file by date.

View Scale

The view scale of the video in live view or playback. It can be set as **Full Screen**, **4:3**, **16:9**, or **Original Resolution**.



Note

You can also set the view scale in Live View module. For details, refer to **Live View** .

Play Performance

The play performance of the live video. It can be set as **Shortest Delay**, **Balanced**, or **Fluency**.

Enable Screen Toolbar Display

Show the toolbar on each display window in live view or playback.

Resume Latest Live View Status After Restart

Resume the latest live view status after you log into the client again.

Disconnect Background Videos in Single Live View

In multiple-window division mode, double-click a live video to display it in 1-window division mode, and the other live videos will be stopped for saving the resource.

Enable Wheel for Zoom

Use the mouse wheel for zoom in or out of the video in PTZ mode, or for zoom in or restoring of the video in digital zoom mode. In this way, you can directly zoom in or out (or restore) the live video by scrolling the mouse.

Auto-change Stream Type

Change the video stream (main stream or sub-stream) automatically in live view according to the size of the display window.

**Note**

When the window division is larger than 9, it will switch to sub-stream automatically.

Hardware Decoding Preferred

Set to enable decoding by hardware for live view and playback. Hardware Decoding can provide better decoding performance and lower CPU usage when playing the HD videos during live view or playback.

Enable Highlight

Mark the detected objects with green rectangles in live view and playback.



4. Click **Save**.

7.3 Set File Saving Path

The video files from manual recording, the captured pictures and the system configuration files are stored on the local PC. The saving paths of these files can be set.

Perform the following task when you need to set the file saving path.

Steps

1. Click  and select **System** to enter the System Configuration page.
2. Scroll the mouse or click **File** on the right to locate the File content.
3. Click  and select a local path for the files.
4. Click **Save** on the bottom.

7.4 Set Icons Shown on Toolbar

The icons and the order on the toolbar in the live view and playback window can be customized. You can select to display what icons and set the icon order.

Perform the following task when you need to set icons shown on Toolbar.

Steps






1. Click  and select **System** to enter the System Configuration page.
2. Scroll the mouse or click **Toolbar** on the right to locate the Toolbar content.
3. Click to select the icon to be displayed on the toolbar. The selected icon will be marked with .
4. **Optional:** Drag the icon to set the icon order on the toolbar.

Table 7-1 Icons on Live View Toolbar

	Stop Live View	Stop the live view in the display window.
	Capture	Capture the picture in the live view process. The capture picture is stored in the PC.
	Record	Start manual recording. The video file is stored in the PC.










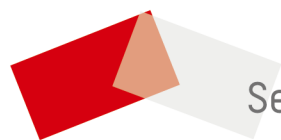
	PTZ Control	Start PTZ mode for speed dome. Click and drag in the view to perform the PTZ control.
	Two-way Audio	Start the two-way audio with the device in live view.
	Digital Zoom	Enable the digital zoom function. Click again to disable the function.
	Instant Playback	Switch to the instant playback mode.
	Remote Configuration	Open the remote configuration page of the camera in live view.

Table 7-2 Icons on Playback Toolbar

	Capture	Capture the picture in the playback process. The capture picture is stored in the PC.
	Record	Clip the video and store the clipped video on your PC.
	Digital Zoom	Enable the digital zoom function. Click again to disable the function.
	Download	Download the video files of the camera and the video files are stored in the PC.

5. Click **Save** on the bottom.



See Far, Go Further